


Testing & Performance

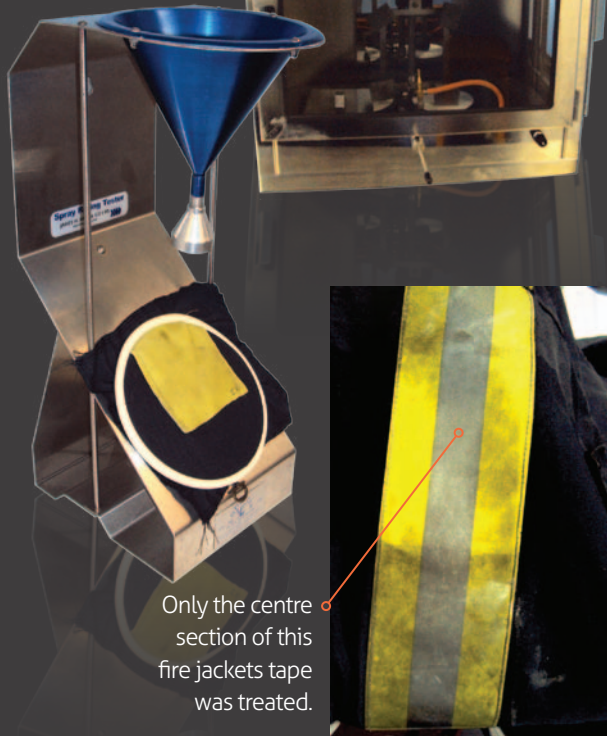

The Firepower cleaner/sanitiser may be purchased online at www.fire-power.co.uk or by calling Rachel Linaker on 01754 767171 ext 274 or e-mail rachel.linaker@fire-power.co.uk quoting the part re-order codes below.

Order/Reference Codes			
Order Code	Description	Size/volume	No./box
ZNSA61500	Cleaner/Sanitiser Trigger Spray	500ml	24
WNPW61025	Dual Layer Polyester Dry Wipes x 25	300mm x 300mm	5

Be Safe

Report #FP01-2011, which is available on request, evaluates the effect of use of the Firepower cleaner/sanitiser on the water repellence or limited flame spread properties of fire and rescue gloves.

Be Seen

High Visibility tape can also be effectively maintained between uses.

Report #FP02-2011, which is available on request, clearly demonstrates compatibility of the Firepower cleaner/sanitiser with various reflective tapes.



Fenland Laundries Limited
Roman Bank, Skegness, Lincolnshire. PE25 1SQ.
Tel: 01754 767171



PPE Cleaner/Sanitiser

A simple solution to maintaining safe, clean personal protective equipment



Firepower
PERSONAL PROTECTIVE EQUIPMENT
Garment and PPE Cleaner/Sanitiser
500ml (1.1 US Gallon)

USES
Professional Personal Protective Equipment combined cleaning and sanitising solution. Uses include treatment of gloves, boots, helmets, and high-visibility fabric and tapes etc. Apply directly to the item or affected area, and clean in conjunction with a soft brush or wipe. For effective microbial sanitisation ensure 5 minutes contact time. Detailed technical data including CLO testing is available on request.

SAFETY
Keep out of the reach of children.
In case of contact with eyes, rinse immediately with plenty of water and seek medical advice. Contains polymer. Do not use for use of flammable materials or in enclosed spaces.

ECOLOGICAL INFORMATION
Highly biodegradable and non-toxic. Persistence and degradability: Biodegradable. Bioaccumulative potential: No bioaccumulation potential. Other adverse effects: Negligible ecotoxicity. No other adverse effects.

HANDLING AND STORAGE
Store in a cool, dry place. Safety data sheet available. Non-flammable, non-toxic, and stable. Store in a cool, dry place. Store in a cool, dry place. Store in a cool, dry place.

From Fenland Laundries Ltd. Tel: 01754 767171

Fenland Laundries Limited Roman Bank, Skegness, Lincolnshire, PE25 1SQ. Tel: 01754 767171



Glove & Boot Care



1 Contaminated Glove

Soiled with a mixture of:

- Used machine oil
- Molybdenum grease
- Rust
- Earth
- Ash
- Carbon
- Clay

Firepower Cleaner / Sanitiser

- 2 Dry Brush glove and spray with Firepower Cleaner / Sanitiser, use in conjunction with Firepower tough dual layer polyester wipes.

Sprayed glove

- 3 To CLEAN the glove, spray glove and leave for 2 minutes, then wipe off. To SANITISE, leave for 5 minutes then wipe off.
Tip: tying in a polythene bag avoids drying out occurring during this 5 minute period, then remove from bag.

- 4 Wipe over with water dampened wipe. Leave to air dry.

Cleaned/
sanitised
glove